


NOTE: CONVENTIONAL CURRENT FLOW IS ASSUMED I.E. FLOWING FROM BATTERY +VE TO BATTERY -VE



# WIRING DIAGRAMS

HARNESS SYMBOLS: (M.W.H.) (P.T.) (B.)

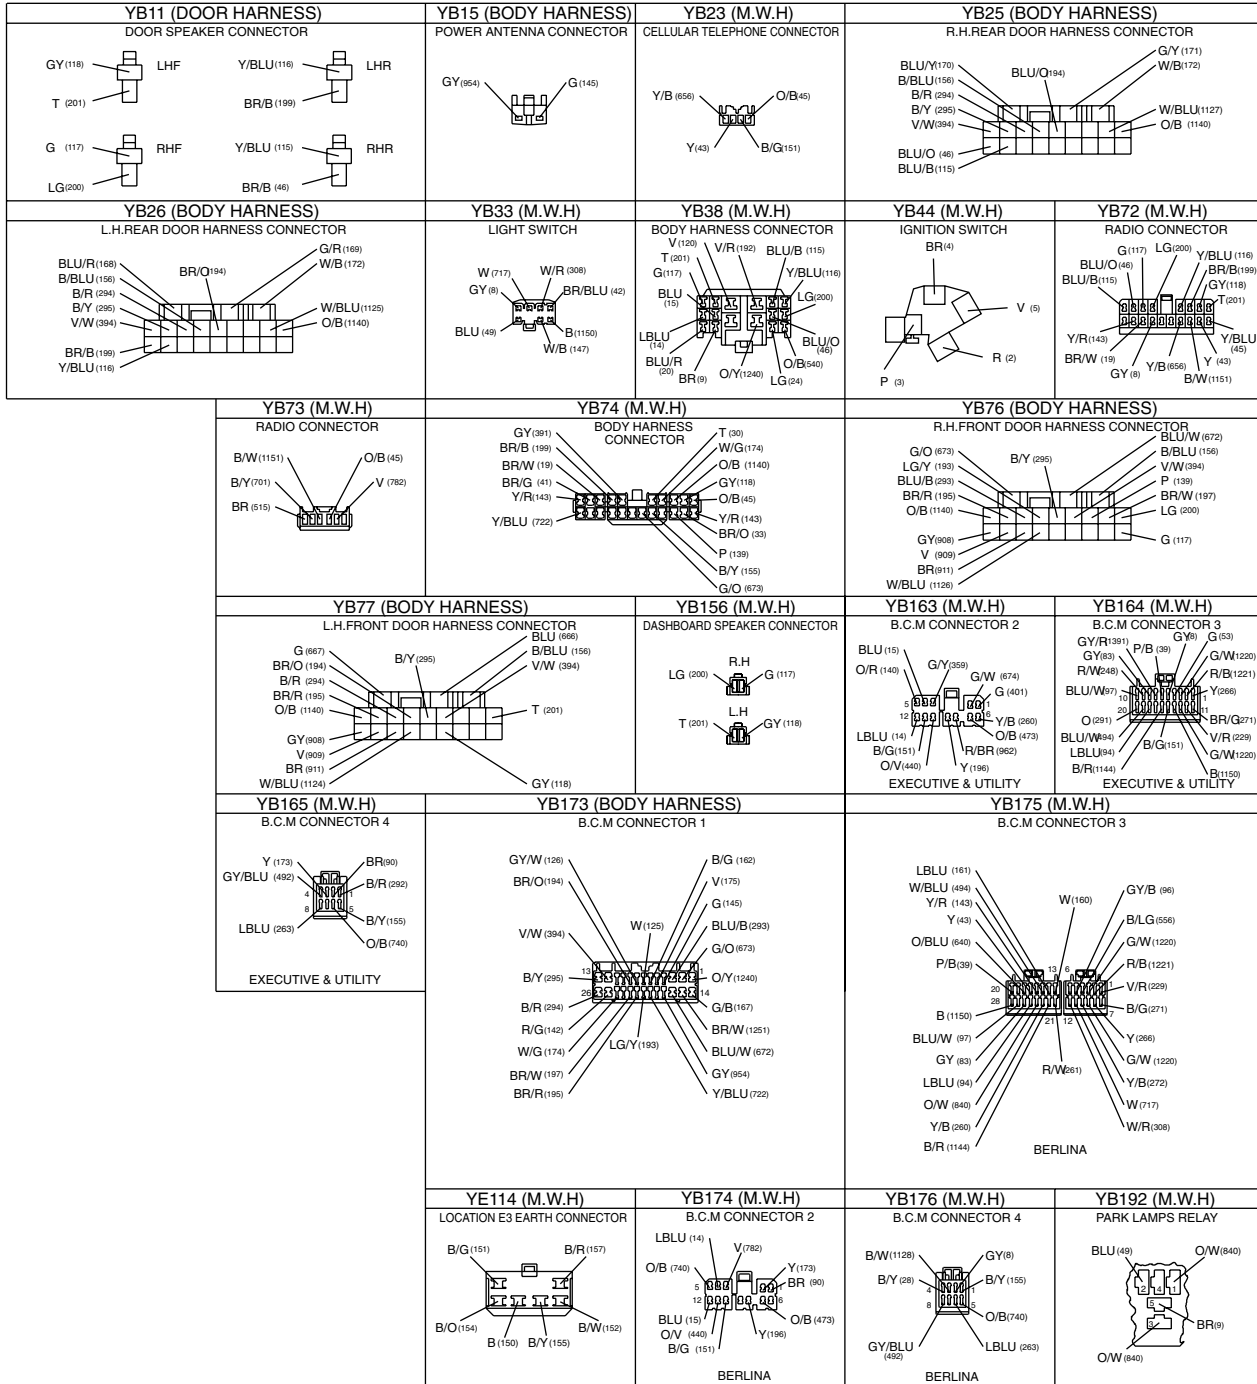